

About Becker radios and RS422.

Becker 6201 do not use RS232 but RS422. That means that a special version of Aviation Companion is needed.

The RS422 connection uses six wires, RX+ and -, TX+ and -, GND (0V) and power (+5V, +14V or +28V).

RS422 version of Aviation Companion is delivered with a cable with open wire ends, six wires.

Five of the wires shall be soldered/crimped to the lower connector J1. The sixth wire is power and shall be connected to planes 14 or 28V.

If your radios connector J1 is unused we can add a connector to the cable for you. You will still need to connect the power wire yourself.

